

Automatic Antenna Tuner

FC-20

Installation Instructions


Thank you for your purchase of the model FC-20 Automatic Antenna Tuner, designed specifically for the FT-847 HF/VHF/UHF Transceiver. The FC-20 can accommodate two antenna inputs, and it includes a cooling fan to ensure thermal stability of the critical matching elements within its compact case.

The FC-20 Automatic Antenna Tuner responds to control commands from the FT-847 Transceiver, providing microprocessor-based impedance matching on the 160 through 6 meter Amateur bands. On HF, the impedance matching range is from 16.5Ω to 150Ω (up to 3:1 SWR), while on the 50 MHz bands the impedance matching range is 25Ω to 100Ω (up to 2:1 SWR). Accordingly, the FC-20 should not be expected to match “long wire” type antennas unless you have taken specific design steps to ensure that the impedance presented to the FC-20 is within these specifications.

Please refer to the FT-847 Operating Manual for operating instructions.

Front/Rear Panel Information

The **POWER** indicator becomes illuminated when the Control Cable is connected between the FT-847 and FC-20 *and* when the FT-847's **POWER** switch is turned on.

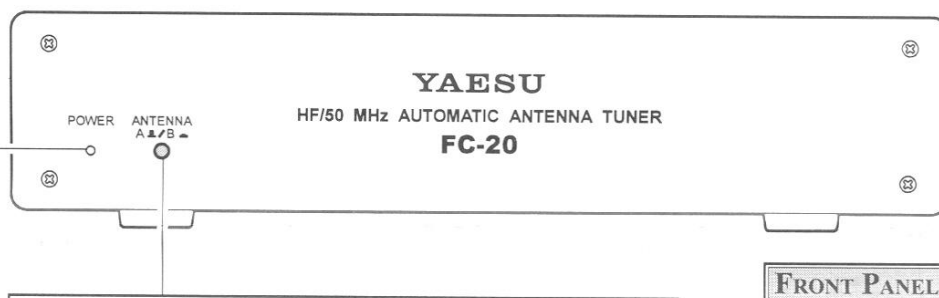


The **ANTENNA** switch allows you to select one of two antennas connected to the rear panel jacks. The (protruding) “A” position of this switch selects the “ANT A” jack, while the (depressed) “B” position selects the “ANT B” jack.

These “M” type (“SO-239”) coaxial jacks accommodate the “A” and “B” antenna inputs for the FC-20.

Use this “M” type (“SO-239”) jack for connection of the interconnecting coaxial cable from the FT-847.

REAR PANEL

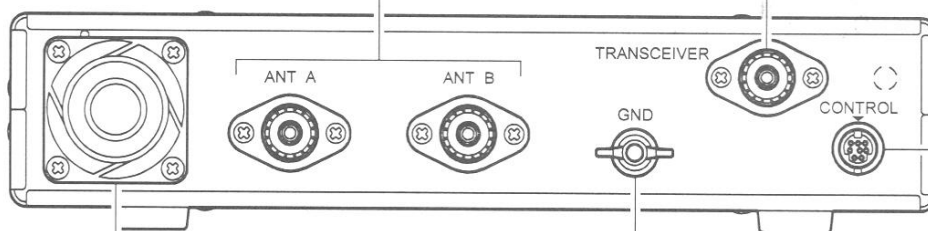

Connect the interconnecting Control Cable from the FT-847 to this miniature DIN connector.

This is the exhaust vent for the cooling fan, which ensures thermal stability of the matching elements inside the FC-20 compartment.


For best performance and safety, connect a good earth ground to the **GND** lug provided.

日本語の説明は裏面に記載してあります。

Interconnections to FT-847




When using the FC-20 on both HF and 6 meters, be sure to set the FT-847's Menu Item #28 to the "HF" selection.

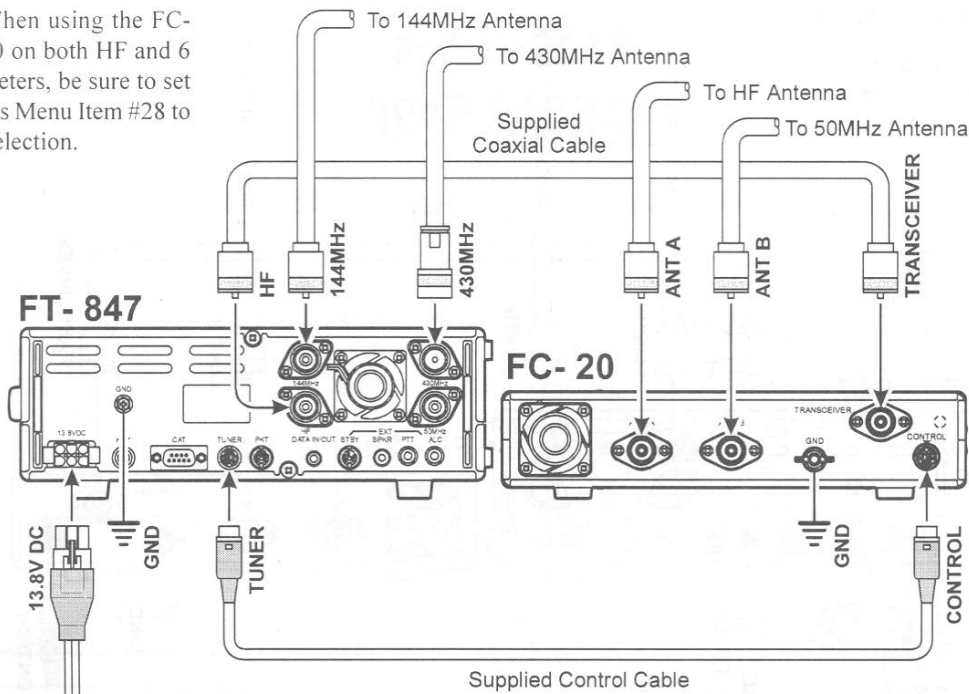


Replacing the Lithium Backup Battery

After several years of operation, it is possible that the microprocessor's backup battery (CR2032) may become discharged. To restore the memory for the tuner settings, the battery will require replacement. Contact your Yaesu Dealer to obtain a suitable replacement, and follow the instructions below:


1. Turn the FT-847 **POWER** switch OFF.
2. Remove the 8 screws affixing the top case of the FC-20, and remove the top case.
3. Turn the FC-20's internal **BACKUP** switch OFF.
4. Remove and replace the lithium backup battery, per the illustration below.
5. Turn the transceiver's **POWER** switch ON, then set the FC-20's **BACKUP** switch to ON.
6. Replace the top case, using the 8 screws removed in step (2) above.

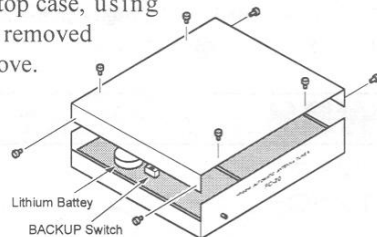

 Removing the Lithium Battery
Gently press inward on the exposed side of the battery, then use your finger to tilt the battery upward and out.



 Installing the Lithium Battery
Lay the battery into the holder at an angle, then gently press it inward and downward to latch it in place.



Specifications

FREQUENCY RANGE: 1.8 ~ 30 MHz, 50 ~ 54 MHz

INPUT IMPEDANCE: 50Ω

MAXIMUM POWER: 100 Watts

MATCHED SWR: 1.5:1 or less

TUNE-UP POWER: 50W (±2.5W)

TUNE-UP TIME: 30 seconds or less

IMPEDANCE MATCHING RANGE:

1.8 ~ 30 MHz: 16.5Ω ~ 150Ω

50 ~ 54 MHz: 25Ω ~ 100Ω

IMPEDANCE MATCHING MEMORIES: 100 channels

INPUT VOLTAGE REQUIREMENT:

13.5V ±10% (supplied from transceiver)

OPERATING TEMPERATURE RANGE: -10°C ~ +50°C

CASE SIZE (WHD): 260 x 55.5 x 193 mm

(10.2" x 2.2" x 7.6")

WEIGHT: 2 kg (4.4 lb.)

Specifications subject to change without notice of obligation.

Supplied Accessories

Coaxial Cable (1.5 m)	1
Control Cable (1.5 m)	1

YAESU MUSEN CO., LTD.

1-20-2 Shimomaruko, Ota-Ku, Tokyo 146-8649, Japan

YAESU U.S.A.

17210 Edwards Rd., Cerritos, CA 90703, U.S.A.

YAESU U.S.A. INTERNATIONAL DIVISION

10913 North West 30th Street, Suite #105, Miami, FL 33172, U.S.A.

YAESU EUROPE B.V.

Snipweg 3, 1118DN Schiphol, The Netherlands

YAESU UK LTD.

Unit 2, Maple Grove Business Centre,
Lawrence Rd., Hounslow, Middlesex, TW4 6DR, U.K.



YAESU GERMANY GmbH

Am Kronberger Hang 2, D-65824 Schwalbach, Germany


YAESU HK LTD.

11th Floor Tsim Sha Tsui Centre, 66 Mody Rd.,
Tsim Sha Tsui East, Kowloon, Hong Kong

CIRCUIT DIAGRAM

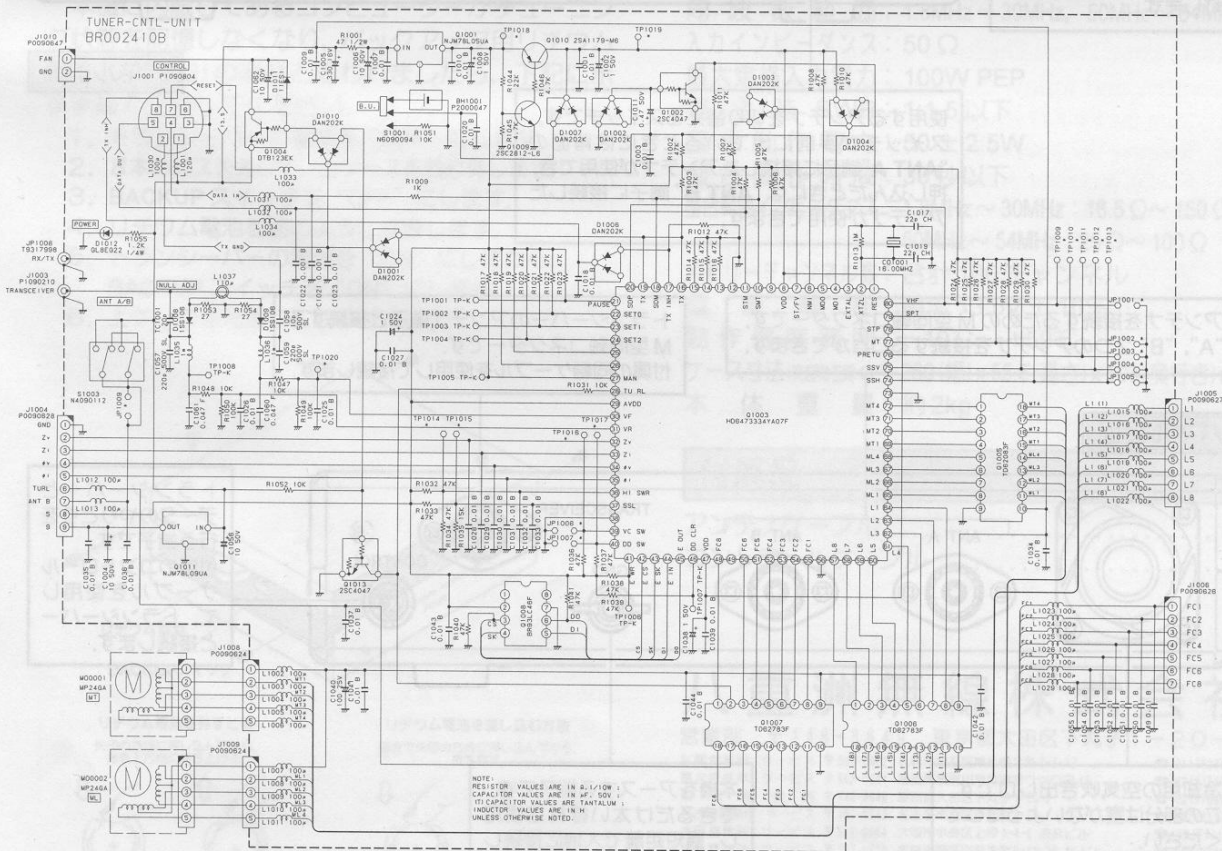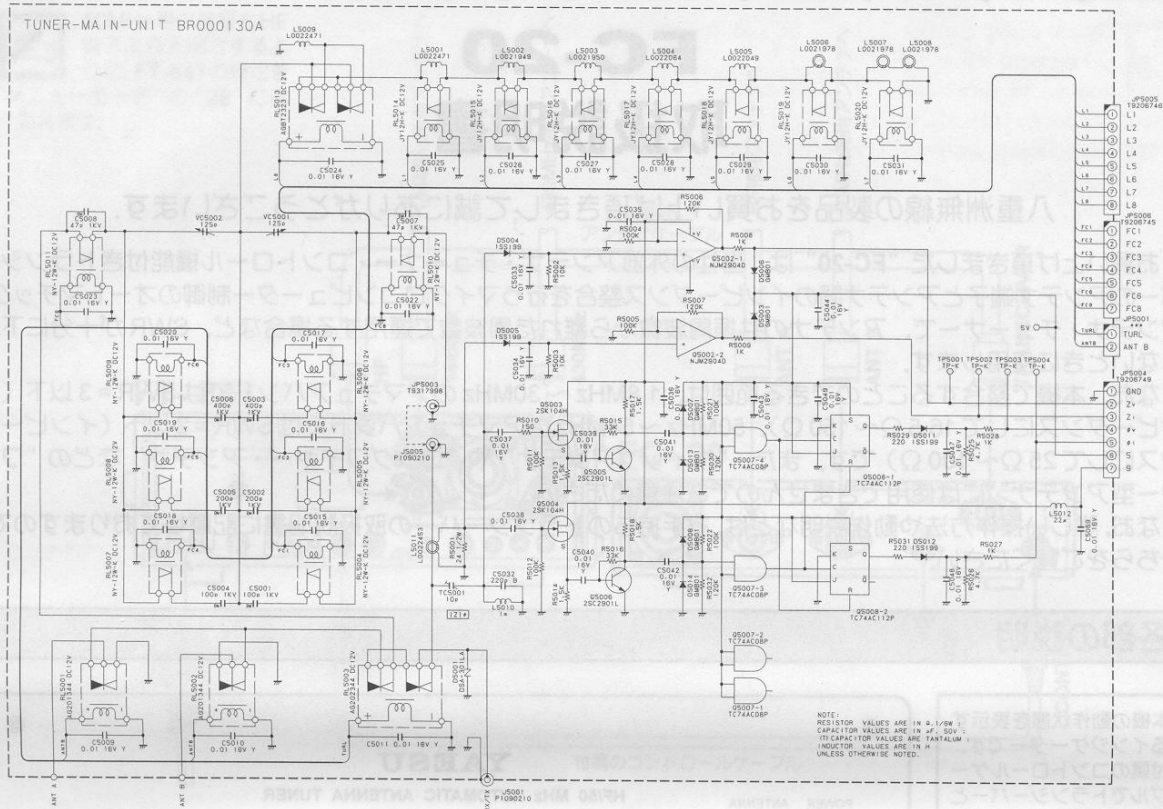

CONNECTION DIAGRAM

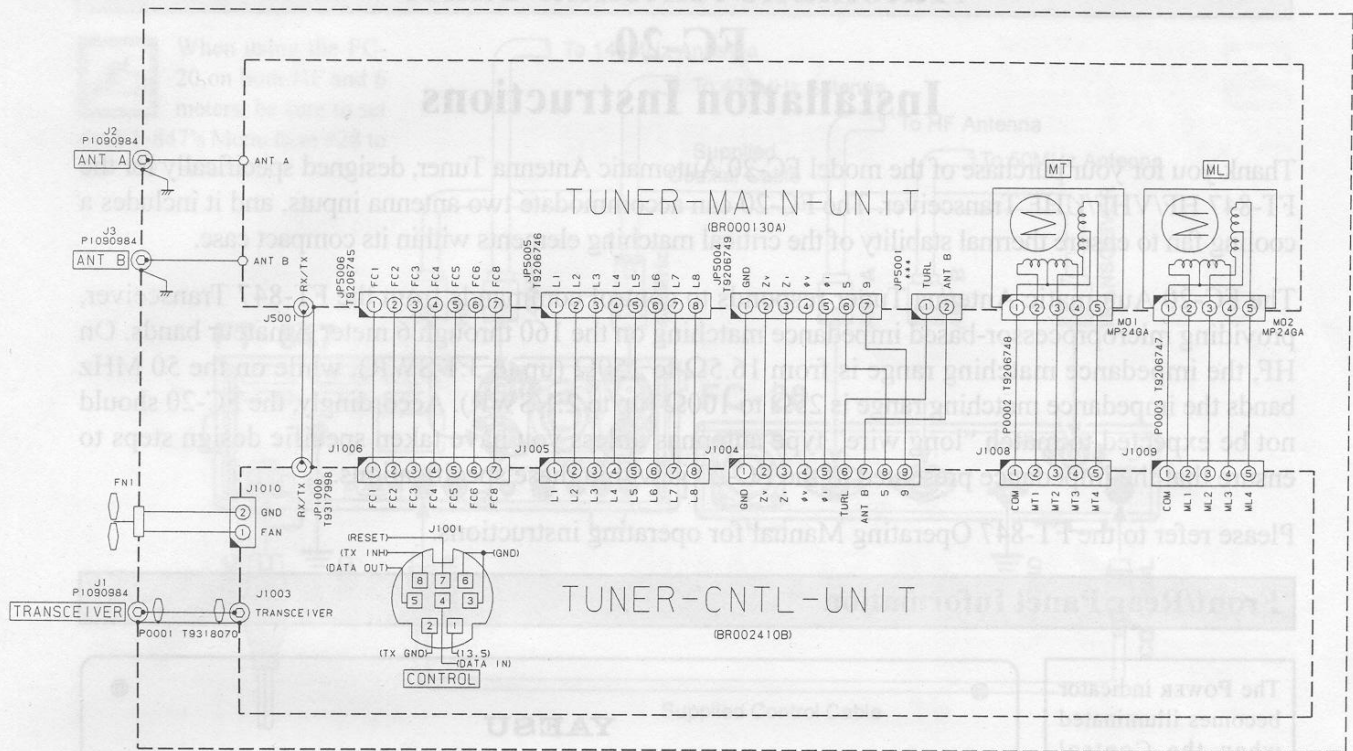

BLOCK DIAGRAM

